


INSTALLATION OF MAIN STAND(STEP 1)

S/N	Description	Quantity	Specification	Place	Torque
①	Scooter	1			
②	Hex Bolt	1	M10×30	Luggage box	
③	Hex Flange Bolt	1	M10×30	Luggage box	
④	Main stand Bush	2		Luggage box	
⑤	Spring	1		Luggage box	
⑥	Main stand	1		Luggage box	

INSTALL STEP:

1. Stand scooter on floor.
2. Fix ④ on ⑥ R&L fixing hole, then fix ⑥ on ①, (⑥ should be horizontal), ② left bolt, ③ right bolt.
3. Install ⑤ on ① and ⑥, to connect ① and ⑥, to make sure ⑥ can move and return flexibly

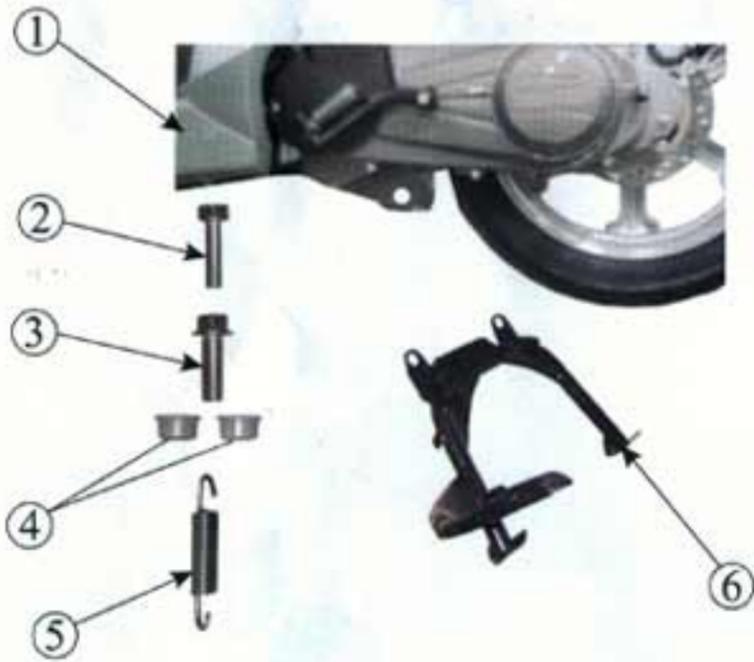

INSTALLATION OF REAR VIEW MIRROR(STEP2)

S/N	Description	Quantit	Specification	Remark
①	L/R.RR. mirror	1		Luggage box
②	Location,L/R.RR. mirrior	1		Luggage box

INSTALL STEP:

1. Install ① on ② with screw (together with ①) respectively.

ATTENTION: Take care of the RIGHT and LEFT mirror in correct position and angle.



INSTALLMENT OF BATTERY (STEP 3)

S/N	Description	Quantity	Specification	Place	Torque
①	Sealed strip	1		In battery box	
②	Electrolyte	1		In battery box	
③	Battery	1		In battery box	
④	Scooter(floor board)	1			
⑤	Wire Power	1		On motorcycle	
⑥	wire Motor	1		On motorcycle	
⑦	Bolt	2	M6×12	Battery	
⑧	Washer	2	M6	Battery	
⑨	Battery cover	1		On motorcycle	
⑩	Screw	2	M6×12	In battery box	
⑪	Wire earth	1		On motorcycle	

INSTALL STEP:

1. Rip off seal on top of ③, and uncover ① on top of ②.
2. Insert ② to ③, fill electrolyte into ③.
3. Put ③ with electrolyte on ④, Connec ⑪ with cathode of ③, Connect ⑤, ⑥ on the anode of ③, tighten with ⑦ and ⑧.
4. Put ③ into hole on ④, neaten the cable, then put on cover ⑨, tighten it by ⑩. You should wait for about 30 minutes after fill the electrolyte, then the battery can be put into use..

